Bar Fridge 112 Litre
USER'S MANUAL
HS-140LN

CONTENTS

Cofoty warnings

a Safety warnings
Meaning of safety warning symbols2
Related warnings for use ·····2
Electricity related warnings ······2
Warnings related to placing items ······3
■ Warnings related to disposal ······3
Proper use of refrigerators
Names of components ······4
Thermostat ·····5
_ placement ·····5
Start5
Maintenance of refrigerators
Cleaning ·····6
■ Defrost6
Stop using6
Frequently asked questions
Door install guidelines about swapping left&right

DEAR CUSTOMER:

Thank you for buying this refrigerator-freezer. To ensure that you get the best results from your new refrigerator-freezer, please take time to read through the simple instructions in this booklet. Please ensure that the packing material is disposed of in accordance with the current environmental requirements.

When disposing of any refrigerator-freezer equipment please contact your local waste disposal department for advice on safe disposal.

This appliance must be only used for its intended purpose.

Safety warnings

Meaning of safety warning symbols



Prohibition symbols

This symbol indicates prohibited matters, and behaviors that are forbidden. Non-compliance with these instructions may result in product damages or endanger the personal safety of users.



This symbol indicates matters that must be followed, and those behaviors must be strictly executed in line with the operation requirements. Non-compliance with the instructions may result in product damages or endanger Warning symbols the personal safety of users.



Note symbols

This symbol indicates matters to pay attention to, and these behaviors shall be specially noted. Due precautions are needed or minor or moderate injuries or damages of the product will be caused.

CAUTION:

The appliance is not intended for use by young children without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

GENERAL:

This type of refrigerator-freezer is widely used in places such as hotels, offices, student dormitories and houses. It is mostly suitable for refrigerating and preserving foods such as fruits and beverage.

> This manual contains lots of important safety information which shall be observed by the users.

 
> > 1

Safety warnings

▶ Electricity related warnings




- Do not pull the power cord when pulling the power plug of the refrigerator. Please firmly grasp the plug and pull it from the socket directly.
- Do not damage the power cord under any condition so as to ensure safe use, do not use when the power cord is damaged or the plug is worn.
- Worn or damaged power cords should be replaced in manufacture-authorized maintenance stations.



- Please use a dedicated three-hole power socket which is 10A or more. The power socket should not be shared with other electrical appliances.
- The power cord should be firmly connected to the socket or else fires might be caused. Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.



 - The refrigerator adopts 220V/50Hz AC power, voltage fluctuations over the range of 220±10%V will cause malfunction or even damage, so a 750 W automatic voltage regulator must be installed in conjunction with the AC power.
- Please turn off the gas valve and then open doors and windows in case of leakage of gas and other flammable gases.
 Do not unplug the refrigerator and other electrical appliances as sparks may cause a fire.



 To ensure safety, avoid placing regulators, rice cookers, microwave ovens and other appliances at the top of the refrigerator, those recommended by the manufacture are not included. Do not use electrical appliances in the food pantry.

▶ Related warnings for use



- Demolition or renovation of the refrigerator is not prohibited.
 It is forbidden to damage the refrigerant lines and the repair and maintenance of the refrigerator must be carried out by professionals.
- Damaged power cord must be replaced by the manufacturer, its maintenance department or related professionals in order to avoid danger.



- The surrounding of the appliance and the embedded structure shall not be obstructed while good ventilation shall be maintained.
- The gap between the refrigerator doors and the refrigerator body is small. Do not put your hand in these areas to avoid crushing fingers. Please be careful when shutting the refrigerator door to avoid falling articles.
- Do not pick foods or containers in the freezing chamber when the refrigerator is running, especially metal containers in order to avoid frostbite.

Safety warnings



- Do not allow children to enter or climb the refrigerator to ensure they are not trapped inside or injured by the fridge falling.
- Do not spray or wash the refrigerator; do not put the refrigerator in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the refrigerator.

 


- Do not place heavy objects on the top of the refrigerator considering that objects may fall when opening the door, and accidentally cause injury.
- Please pull the plug in case of power failure or cleaning. Do not connect the freezer to power supply within five minutes to prevent damages to the compressor due to successive starts.

Warnings related to placing items



- Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- Do not place flammable items near the refrigerator to avoid fires.



 This product is for domestic purposes and is only suitable for the storage of foods. According to national standards, household refrigerators shall not be used for other purposes, such as storage of blood, drugs or biological products.



 Do not place items such as bottled or sealed container of fluid such as beers and beverages in the freezer to prevent bursts and other losses.

Warnings related to disposal



The refrigerator's R134a refrigerant and cyclopentane foam materials are combustible materials and discarded refrigerators should be isolated from fire sources and can not be burned. Please transfer the freezer to qualified professional recycling companies for processing to avoid damages to the environment or other hazards.




Please remove the door of the refrigerator and shelves which shall be properly placed to avoid accidents of children entering and playing in the refrigerator.

2



Proper use of refrigerators

▶ Names of components

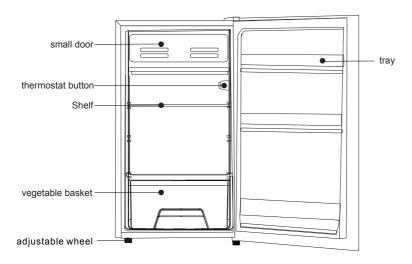

Refrigerating chamber

- The Refrigerating Chamber is suitable for storage of a variety of fruits, vegetables, beverages and other food consumped in the short term.
- Cooked foods shall not be put in the refrigerating chamber until cooled to room temperature.
- Foods are recommended to be sealed up before putting into the refrigerator.
- The glass shelves can be adjusted up or down for a reasonable amount of storage space and easy use.

The features and accessories of the refrigerator you bought may be not

 
A entirely consistent with the legend, please refer to the packing list.

Proper use of refrigerators

▶ Thermostat

- Users may adjust the refrigerator according to the actual needs. It is generally recommended to adjust to the third gear.
- Under the same ambient temperature, higher levels provide more robust refrigeration and lower temperature inside the chamber and vice versa.
- On condition that the compressor runs for a long time or large ice cubes are found in the refrigerating chamber, adjust the thermostat knob to the direction of smaller numbers.
- The figures shown on the control knob represent the gear the thermostat is running at not the temperature. The "Off" position means that the unit will not run."

▶ Illuminating lamp and replacement




 Illuminating lamp parameter: MAX15W Lighting lamps replacement: First unplug the refrigerator-freezer. As specified in the drawing, first remove the lighting lampshade on the arrow, and then replace the bulb.

Placement



 · Before using the refrigerator, remove all packaging materials including bottom cushions and foam pads and tapes inside the refrigerator, tear off the protective film on the door and the refrigerator body.



 Ensure The refrigerator is placed in a well-ventilated indoor place; the ground shall be flat, and sturdy (rotate left or right to adjust the wheel for leveling if unstable).



 Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or watery places to prevent rust or reduction of insulating effect.

 


- The space above the refrigerator shall be greater than 30cm, and the distances from both sides and backside shall be more than 10 cm to facilitate opening and closing and heat dissipation.
- · Wipe the refrigerator inside and outside with a warm moist rag(add a small amount of detergent in the warm water and wipe clean finally with clean water).
- Please leave enough space to ensure feasible opening and drawer removal.
- Dimensions shown are for reference only.

▶ Start



- The refrigerator should sit for half an hour before connecting 220V/50Hz power when it is firstly started.
- The refrigerator should run 2 to 3 hours before loading fresh or frozen foods; the refrigerator should run for more than 4 hours in summer in advance considering that the ambient temperature is



5

4

Maintenance of refrigerators

▶ Cleaning

 Dusts behind the refrigerator and on the ground should be regularly cleaned to improve the cooling effect and energy saving. The interior of the refrigerator should be cleaned regularly to avoid odor. Soft towels or sponge dipped in water and non-corrosive neutral detergents are suggested for cleaning. The freezer should be cleaned with clean water and a dry cloth. Open the door for natural drying before the power is turned on.



- Do not use hard brushes, clean steel balls, wire brushes, abrasives, such as toothpastes, organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items to clean the refrigerator considering that this may damage the fridge surface and interior.
- Do not rinse with water so as not to affect the electrical insulation properties. Please use a dry cloth when cleaning lighting lamps, temperature control knob and electrical components.



Please unplug the refrigerator for defrost and cleaning.

Defrost

• Defrost the freezing compartment whenever the layer of frost on the surface of the evaporator reaches 3 or 4 mm. When defrosting remove all food and set the thermostat to "OFF" position. Put the drip tray under the evaporator to collect melted water. After the frost has melted, discard the melted water and dry up the interior of refrigerator. The refrigerator can then be restarted by turning its thermostat to the desired setting.

Do not use metal utensils or electric heater for defrost so as not to damage the appliance. Please A remove the food and put in a cool place when defrosting before removing drawers and other accessories.

Discontinue use

Foods can be preserved for a couple of hours even in summer in case of power failure; it is recommended to reduce the frequency of opening door and do not put fresh foods into the freezer.

Please unplug the refrigerator left unused for a long time for cleaning. Keep the door open to avoid

Before moving the refrigerator, please remove all items in the refrigerator and fasten the glass partitions, fruit and vegetable boxes, freezer drawers with tape in case the door opens during movement; Do not turn upside, horizontally place or vibrate the refrigerator. The carrying angle can not be greater than 45 °C.



Continuous operation is recommended when the refrigerator is started. Please do not move 🔼 the refrigerator under normal circumstances so as not to affect the refrigerator's service life. 🧻

Frequently asked questions

▶ The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not settled.

Inoperation	Whether the freezer is plugged and connected to power; Low voltage; Failure power or tripping circuit
Odor	Odorous foods should be closed wrapped; Whether foods are rotten; Whether the interior shall be cleaned.
Foods in the refrigerating chamber are frozen	Whether the thermostat is over adjusted; Whether foods containing water is put in inside the glass partition.
Long-term operation of compressor	It is normal that refrigerator operates for longer time in summer when the ambient temperature is higher; Do not put too much food in the freezer at one time; Do not put foods until they are cooled; Frequent opening of refrigerator door. Thick frost layer (defrost is needed)
The refrigerator door can not be properly closed.	The freezer door is stuck by food packages; Too much food; Tilt refrigerator.
Loud noises	Whether the food is leveled, whether the refrigerator is balanced; Whether the refrigerator parts are properly placed.

- ◆The refrigerator enclosure may emit heat during operation specially in summer, this is caused by the radiation of the condenser, and it is a normal phenomenon.
- ◆ Condensation: condensation phenomenon will be detected on the exterior surface and door seals of the freezer when the ambient humidity is large, this is a normal phenomenon, and the condensation can be wiped away with a dry towel.
- ◆ Airflow sound: Refrigerants circulating in the refrigerant lines will produce eruption of sound and grunts which is normal does not affect the cooling effect.
- ◆Buzz: Buzz will be generated by running compressor specially when starting up or shutting down.
- ◆ Clatter: The solenoid valve or electric switch valve will clatter which is a normal phenomenon and does not affect the operation.
- ◆The refrigerating chamber will periodically frost and defrost (water drops will be generated on the backside of the refrigerating chamber when defrosting) which are normal.

Note: the following should be carried out by a qualified tradesman to ensure the door is sealed correctly.

Reversing The Door SwingReversing

Caution: To avoid injury to yourself and/or property, we recommend someone assist you during the door reversal process.

- •Ensure the appliance is unplugged and empty.
- •Adjust the two leveling feet to their highest position.
- •We recommend you have someone to assist you.


Tools required


· Cross-bladed screw driver

NOTE:


To take the door off it is necessary to tilt the appliance backward. You should rest the appliance on something solid e.g. a chair just below the top panel so you can access the bottom of the refrigerator.

DO NOT lay the appliance completely flat as this may damage the coolant system.

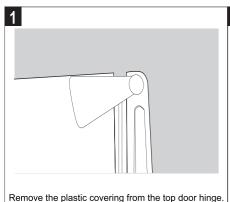


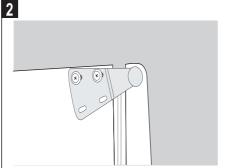



Unscrew the two screws from the bottom bracket. Remove the foot from opposite side.

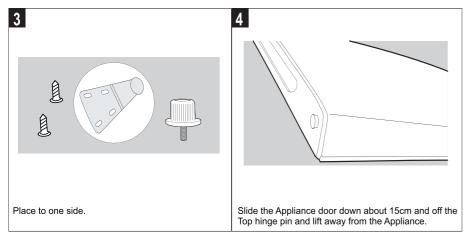

Reversing The Door SwingReversing

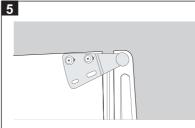

 


 

Slide the Appliance door back on to the Top hinge, making sure it's the right way up.

Screw the bottom hinge into place on the new side.

 Replace the other foot on the other side.Replace the plastic covering by clicking back into position on the door hinge.



Check that the door is aligned horizontally and vertically and that the seals are closed on all sides before finally tightening the bottom hinge.

Re-adjust the levelling feet.

RECOMMENDATIONS:

- 1) WARNING Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- 2) WARNING Do not damage the refrigerant circuit.
- 3) WARNING Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- 4) The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- 5) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 6) Children should be supervised to ensure that they do not play with the appliance.
- 7) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 8) Please abandon the refrigerator-freezer according to local regulators for it use flammable blowing gas and refrigerant.
- 9) Please according to local regulations regarding disposal of the appliance for its flammable refrigerant and blowing gas. Before you scrap the appliance, please take off the doors to prevent children trapped.



Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

